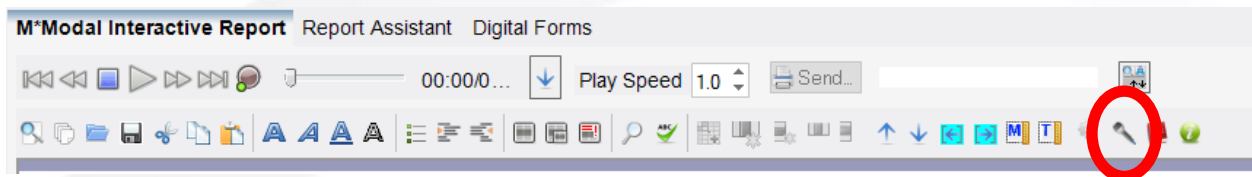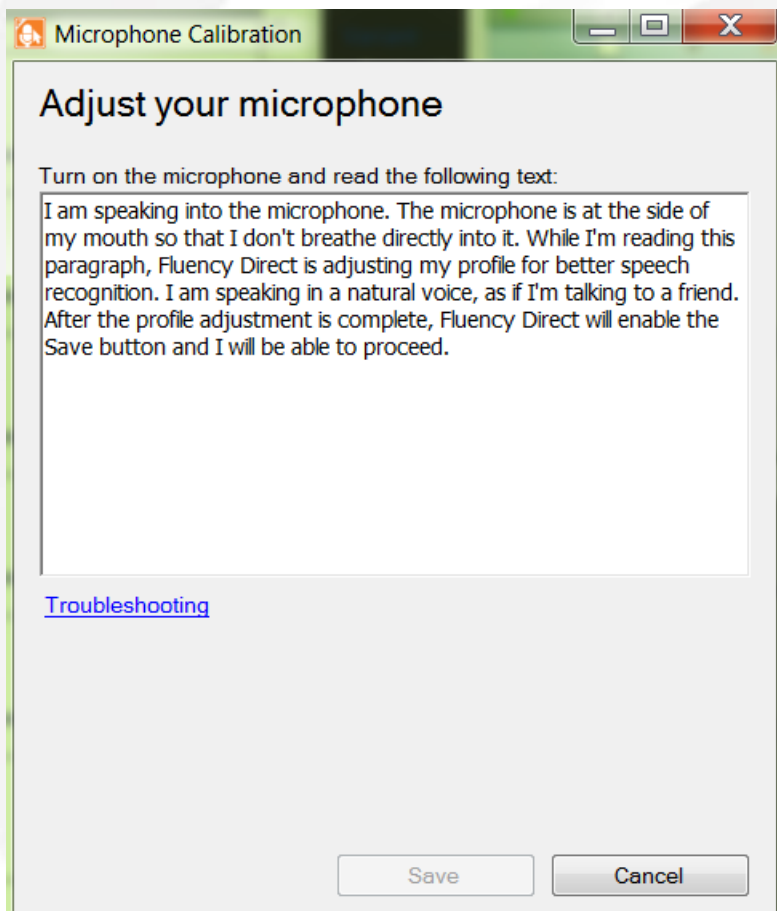## Microphone Calibration

From the Pending Dictation WL select the microphone icon

Turn on the microphone and read the text

Click Save